

HADLEY CLAMP BLOCKS INSTALLATION INSTRUCTIONS



Kit #M025500A Includes:

- 2 – M25218 - Clamp Blocks
- 2 – M25219 - Back Caps
- 4 – M25220 - Stainless steel ¼ - 20 Split Lock Washers
- 4 – M25221 - Stainless steel ¼-20 X 1¼ Cap Screws
- 4 – M25222 - Stainless steel ¼ - 20 Hex Nut
- 1 – M25223 - Instruction Sheet




Kit # M025501A Includes:

All items in M025500A Kit with the addition of a M025001A 4WAY Motorized Mirror Head.

Kit # M025502A Includes:

All items in M025500A Kit with the addition of a M025002A 4WAY Manual Mirror Head.

- Remove old mirror head and wire harness from mounting bracket.
- Sequence hardware as you attach mounting blocks per illustration above
- Attach both clamp blocks (hand-tighten) approximately 17” apart on mounting bracket, see illustration below.

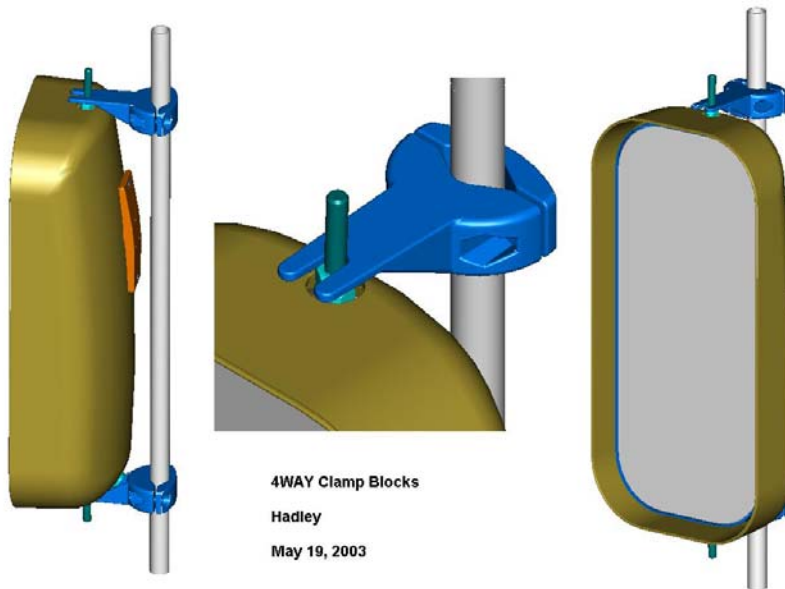

- Attach new mirror head to the “fork” slot of each clamp block, hand tighten.
- Adjust mirror and blocks to desired position on tube and tighten block screws.
- Route harness provided into cab.
- Install Mirror Switch in Dash as shown in Mirror Instructions.
- Adjust mirror head to desired position and tighten mounting hardware.
- Test mirror functions (electrically).
- Wire-tie the harness as needed along tube.
- The installation is now complete.

HADLEY CLAMP BLOCKS INSTALLATION INSTRUCTIONS



Completed Assembly